8020A-7601 LIQUID CRYSTAL DISPLAY (LCD) REPLACEMENT KIT
P/N 613398

ITEM	PART NUMBER	DESCRIPTION	QUANTITY
1	504324	LCD Display	1
2	531657	LCD Bracket	1
3	531665	LCD Bracket Plate	1
4	520858	Connector 802X	1
5	650655	Display Lens	1
6	682997	Display Bezel	1
7	448456	Bracket Screw	2
8	613406	Instruction Sheet	1

NOTE: THE LCD IN THIS KIT WILL NOT WORK FOR DMM MODELS 8010A, 8012A, D810 OR D811. IF YOUR LCD REQUIREMENT IS FOR THESE MODELS, CONTACT JOHN FLUKE PARTS DEPT. AND ORDER LCD, P/N 698381.

DIAL TOLL FREE: 1-800-526-4731

Handheld Models

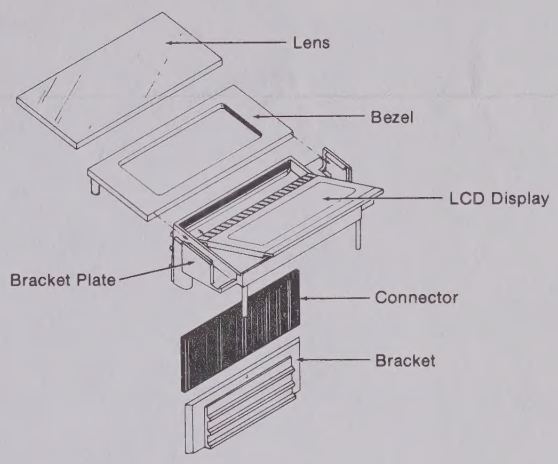

Figure 1.

8020, 8021, 8022, 8024, 8026, D800, D802, D804
Instructions for these handheld models appear below.

INSTRUCTIONS — HANDHELD MODELS

1. Remove the instrument from its case.
2. Remove the LCD bracket and all interconnect components by removing the two screws at the rear of the circuit board. Discard all of the old display components.
3. Refer to Figure 1 during the following assembly procedures.
   A. Place the LCD into the bracket by inserting the edge with the connector pattern under the lip at the top edge of the bracket.
   B. Orient the display bezel with the posts at the rear of the bracket. Slide the bezel into the bracket between the LCD and the bracket fingers.
   C. Slide the clear display lens into the bracket between the bezel and the bracket fingers.
   D. Turn the bracket over and drop the layered connector into the slot at the rear of the bracket. Insure the layered connector edges are clean.
   E. Insert the bracket plate into the same slot in front of the connector. The plate will snap in place.
4. Install the assembled bracket in the circuit board. Use the new screws and tighten evenly.
5. Reassemble the instrument and verify proper operation.
6. If the LCD must be replaced in the future, first loosen the screws to remove pressure, then slide the lens and bezel out.
7. Problems? Contact your nearest Fluke Service Center for assistance. A list of Service Centers may be found in the rear of your Instruction Manual.

P/N 613406 Rev 1 7/84 Litho in U.S.A.

FLUKE®